

Ergonomic Equipment

OWNER'S MANUAL

**MODEL MP-
MODULAR PLATFORMS**

Contents

Warnings & Safety Instructions	1	Warranty	3
Replacement Parts	1	Routine Maintenance & Safety Checks	4
Parts Identification	2	Safety Label Identification	4
Installation (and/or assembly) Instructions	3		

Important Notes, Warnings and Safety Instructions

- Failure to read and understand this owner's manual before using, installing or servicing the Modular Work Platform ("MP") or any of its parts constitutes a misuse of the product. All persons who will install, use, or care for this product must be familiar with this material.
- Completely unload the work platform(s) and stairs before working on any part of the system.
- Ensure that all information / safety / warning labels stay in place and remain legible.
- The manufacturer provides the illustrations, diagrams, and text in this manual for general reference purposes. All information within is subject to change without prior notice.
- Each installation is unique and requires adaptations that are site-specific. Therefore, it is ultimately the responsibility of the product user to determine the suitability of this product for the intended application, and to verify that its installation and use will meet all applicable codes.
- Do not use the MP or any of its components if any damage or unusual noise is observed.
- The MP is intended for installation & use only on compacted, improved surfaces.
- Do not modify the MP without the manufacturer's approval. Failure to receive authorization for changes to the equipment automatically voids the warranty.
- Maintenance and repairs should be done only by personnel who are qualified and authorized to perform the required work.

When Ordering Replaement Parts

We take pride in using quality parts on the equipment we manufacture. We are not responsible for equipment problems resulting from the use of unapproved replacement parts.

To order replacement or spare parts for this equipment, contact the factory.

In any communication with the factory please be prepared to provide the machine's serial number, which is indicated on the machine data plate.

Receiving instructions

It is possible that this product could incur damage during transit.

Inspect the unit closely when it arrives. If you see evidence of damage or rough handling to either the packaging or to the product when it is being unloaded, immediately make a note of it on the Bill Of Lading!

It is important that you remove the product's packaging upon its arrival to ensure that there is no concealed damage or to enable a timely claim with the carrier for freight damage.

Also verify that the product and its specifications are as ordered.

MP PARTS IDENTIFICATION (All dimensions presented in inches.)



STAIR ASSEMBLY (MP-S-X)

DESCRIPTION	QTY
Hand Rail Hardware	
Handrail Joint Brackets	8
3/8 - 16 x 3/8 lg. set screw	8
3/8 - 16 x 3/4 lg. bolt	4
3/8 - 16 x 1 1/4 lg. socket, cap screw	4
3/8 - 16 lock nuts	4
To Mount Stairs to Platform	
7/16 - 14 x 3/4 round head carriage bolt	4
Spacer	2



PLATFORM (MP-P)

DESCRIPTION	QTY
Connecting Angle Brackets (not shown)	2
7/16 - 14 x 1 3/4 lg bolt	4
7/16 lock washer	4
7/16 - 14 hex nut	4



HANDRAIL (MP-HR)

DESCRIPTION	QTY
7/16 - 14 x 1 3/4 lg bolt	4
7/16 lock washer	4
7/16 - 14 hex nut	4
Mounting brackets (not shown)	2



LEG SETS (MP-L)

DESCRIPTION	QTY
7/16 - 14 x 1 1/2 lg. bolt	11
7/16 lock washer	11
7/16 - 14 hex nut	11
Spacer	2

Installation (and/or Assembly) Instructions – MP Platform System

Review this entire section before installing the MP system.

Contact the factory for answers to any questions that arise during installation, or for information regarding optional features not covered by the owner's manual.

The MP system must be anchored to a concrete surface before use!

- Modifications or additions to the MP without prior manufacturer's authorization automatically void the limited warranty. The addition of ancillary equipment to the MP system may necessitate that its load capacity be reduced.
- The installation must comply with all requirements applied to the product, such as local building codes and occupational health and safety regulations. The end-user must verify that the supplied equipment is installed appropriately for the environment in which it will be used.
- Installation should be performed by suitably trained personnel with appropriate equipment.

For a typical installation of a standard MP, you will need the following:

- Means to lift, hold & support the individual components.
- A smooth, level, and adequately strong concrete surface.
- Concrete anchors, a masonry drill, a masonry bit, hand tools, grout, and steel shims. Consult the architect or facility engineer to determine the best size and type of hardware with which to anchor the machine to the floor.

Tips to install a standard MP system:

- Loosely bolt all sections together. After all sections are put together – go through & tighten down all fasteners
- Flat plate spacers are required at all leg set brace junctions.
- Angle spacers / stiffeners are required at any junction where a platform is only being bolted to another platform.
- Any MP system more than 48" tall MUST have leg set braces.
- A leg set brace must be installed no less than every three platforms.
- Fasten guardrails to each open side of any platform by first bolting two guardrail brackets to each open side of the platform; then sliding the legs of a guardrail into the brackets.
- If only 1 platform is installed, max. capacity = 500lbs.; if 2 or more platforms are installed, max. capacity = 1000 lbs.
- Anchor all mounting plates to the floor.
- Shim and/or grout under the brackets if needed to level the platform.
- Hand railing MUST be installed on each open side of a platform or stairs.
- Clean up any debris, and verify that all of the information/safety/warning labels are in good condition.

Product Warranty

One Year LIMITED WARRANTY

The manufacturer warrants for the original purchaser against defects in materials and workmanship under normal use for one year after date of shipment (not to exceed 15 months after date of manufacture). Any part that is determined by the manufacturer to be defective in material or workmanship and returned to the factory, shipping costs prepaid, will be, as the exclusive remedy, repaired or replaced at our option. Labor costs for warranty repairs and/or modifications are not covered unless pre-approved by the manufacturer or done at the manufacturer's facilities. Any modifications performed without prior written approval of the manufacturer may void warranty. This limited warranty gives purchaser specific legal rights which vary from state to state. All specifications are subject to change without notice.

LIMITATION OF LIABILITY

To the extent allowable under applicable law, the manufacturer's liability for consequential and incidental damages is expressly disclaimed. The manufacturer's liability in any event is limited to, and shall not exceed, the purchase price paid. Misuse or modification may void warranty.

Warranty does not cover labor or consequential damages including, but not limited to, business interruption costs, lost profits, or lost business opportunities.

WARRANTY DISCLAIMER

The manufacturer has made a diligent effort to accurately illustrate and describe their products. However, such illustrations and descriptions are for the sole purpose of identification, and do not express or imply a warranty that the products are merchantable or fit for a particular purpose, or that the products will necessarily conform to the illustrations or descriptions.

The provisions of the warranty shall be construed and enforced in accordance with the Uniform Commercial Code and laws as enacted in the State of Indiana.

DISPOSITION - Our company will make a good faith effort for prompt correction or other adjustment with respect to any product that proves to be defective within the Limited Warranty Period. Warranty claims must be made in writing within the warranty period.

Routine Maintenance & Safety Checks – MP

Warning: Identify all potential hazards and apply all appropriate safety procedures before beginning work.

- Only qualified maintenance personnel should work on the Modular Platform or any of its components.

Inspect daily for:



- Damage or deformation to the structural members.
- Proper installation of the hand railing and or other guards (if applicable).

Inspect monthly for:

- Integrity of the retaining hardware and fasteners.
- Verify the integrity of the frame anchor bolts and the concrete around them.
- All the information/safety/warning labels being in place and in good condition.

Safety Label Identification


* Product safety signs or labels should be periodically inspected and cleaned by the product users as necessary to maintain good legibility from safe viewing distances -- ANSI 535.4 (10.21). Contact the manufacturer for replacement labels.

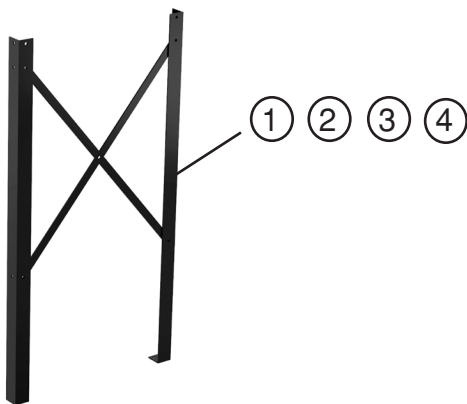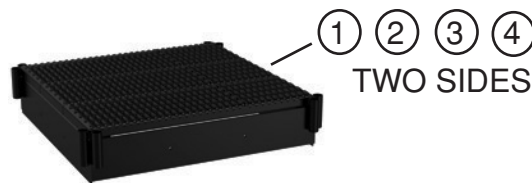

②

MODEL/MODÉLO/MODÈLE _____
STATIC CAPACITY (evenly distributed) _____ lbs.
LA CAPACIDAD CONSTANTE (distribuida uniformemente) _____ kgs.
CAPACITÉ STATIQUE (distribuée régulièrement) _____ kgs.
SERIAL/SERIE/SÉRIE _____
VESTIL MANUFACTURING CORPORATION
Phone (260) 665-7586 • sales@vestil.com • www.vestil.com
287 REV 0508

287

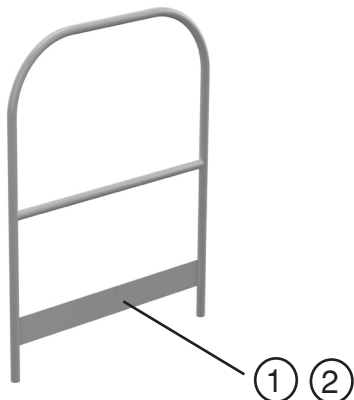

③

⚠ WARNING
Improper or incomplete assembly, installation, or use might result in serious injuries.
• DO NOT use the platform systems UNLESS
1. All components are rigidly fastened together
2. Every open side of a platform and stair section is guarded with a railing
3. Each stair and pair of supports is securely anchored to the floor
• DO NOT exceed the capacity of any component
• Inspect the entire assembly routinely for loose fasteners including anchor bolts.
840

840

④

SINGLE PLATFORM CAPACITY
500 LBS.
MAXIMUM PLATFORM CAPACITY
1,000 LBS.
(Two (2) or more platforms connected together)
842

842